



## **Humidity Sensor**



EDG-160 (832-00178), a new humidity sensor intended for use in livestock houses, is now available. This high-precision sensor measures relative humidity using a 4-20MA output.

During cleaning and disinfection, the sensor must be protected using the protection cap and be placed in vertical position. After the

- 11-30V DC Suppl sensor has been exposed to water and condensation, the sensor requires time during which the relative humidity is less than 80% in order to measure correctly. Do not bend the sensor, as this would inflict permanent damage on the electronics of the sensor.

The EDG-160 (832-00178) will replace the current humidity sensor part number "PROBE-EDG-HUM".

Item Description		Lbs	Kgs			
028-00679 (EDG-163)	HUMIDITY SENSOR KIT	1	0.45			
Service Parts						
832-00178 (EDG-160)	HUMIDITY SENSOR, 4-20 mA OUTPUT	0.5	0.23			
540-00223 (EDG-161)	HUMIDITY SENSOR BRACKET	0.25	0.11			
550-00342 (EDG-162)	HUMIDITY SENSOR REPLACEMENT CAP, PACK OF 5	0.25	0.11			

To complete these steps, you must have set-up privileges.

## CONFIGURING EDGE SOFTWARE FOR HUMIDITY SENSOR:

- 1. Select the Equipment Congifuration Icon
- 2. Select the room you wish to add the equipment to
- 3. Select Humidity probes from the equipment list

Barn1

Humidity probes





- 4. Select the Add or Copy equipment button
- 5. Give the sensor a *Name* and then select the *Model*.

*Name	Humidity Sensor		
*Model	Dol 104		<b>.</b>
*Expansion Box			
*Slot			
*Input			

The Expansion Box, Slot, and Input are site-specific and determined by where the sensor wiring is landed.



When the tile turns green the system has recognized it and if you choose, the following steps can be completed.

## CONFIGURING EDGE SOFTWARE ALARMS FOR HUMIDITY SENSOR:

1. Select the Setup Icon

2. Select the room you wish to add the alarm to Barn1

- 3. Select Alarms at in the lower left-hand corner.
- 4. Select Relative humidity.
- 5. Select *High Humidity, Low Humidity alarm* and/or *Main Alarm relay* and then enter the specific alarm criteria you want in the fields shown below:

**Relative humidity** 

Relative humidity	
Relative humidity	
High humidity alarm	80%
High humidity alarm offset	20%
Set point	60%
Low humidity alarm offset	-20%
Low humidity alarm	40%
Alarm relay	
Main alarm relay	
Alarm relay	[None]

Please contact your District Manager if you have any questions.

